


You would like to change the picture motif in your PanoVario® picture frame? No problem. In only eight steps, we'll show you, in both words and pictures, how it works. Simply follow our picture gallery.



Unclip the attached design panels.

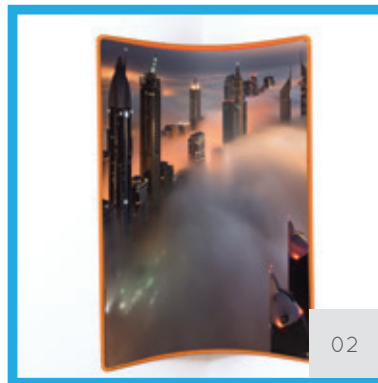

This is how your picture frame looks once all design panels have been removed.




Unfasten the Velcro. Now you can remove your old picture motif from the frame.




View of the frame without picture motif.




Place the frieze band at a right angle on the new picture motif. In doing so, begin at the top left. Then attach the band.

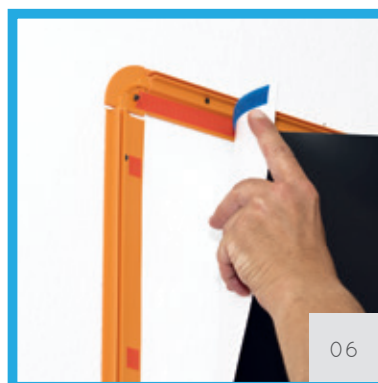

Now fully attach your picture motif.

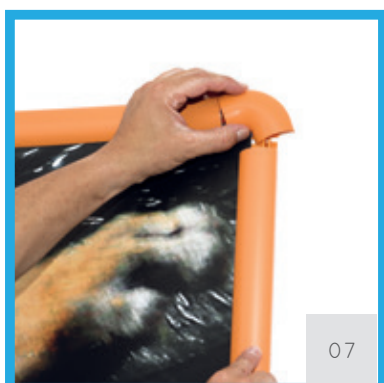

Clip your design panels back on.

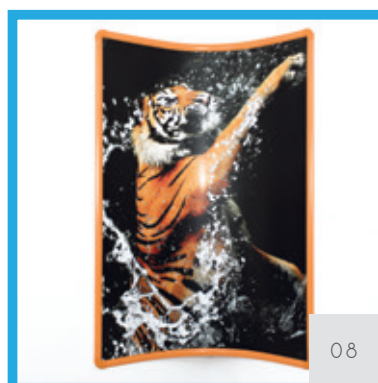

Finished. And the motif is changed - in no time!